



Everything you need from tents to teaspoons

## Hot Dog Steamer

We are pleased to provide to you quality equipment.

### Instructions:

1. Fill bottom of well with hot water until it contacts the bottom of the food pans. If using a perforated pan do not allow water to enter the pan.
2. Place holding pans into well.
3. Preheat on high for 30 minutes. Water temperature should be at least 180 degrees.
4. Place food in pans and allow to heat on high until internal temperature is at least 150 degrees.
5. Adjust temperature setting to hold product at 150 degrees.
6. Keep lids on pans to maintain temperature.

### Cleaning:

Use mild soapy water to clean steamer. Wipe machine dry.

### Troubleshooting:

Hot dogs not warming properly: Do NOT stack hot dogs. Steam needs surface area so place in steamer crisscrossed

Condensation on outside of steamer: cool air striking the warm surface may cause moisture accumulation. Protect unit against cool drafts.

Casing of hot dogs burst: Too much steam is being generated. Move thermostat to a lower setting.

Buns are too soggy or too dry: Adjust the steam control as necessary.

You will be charged a replacement fee for items returned dirty, broken, damaged or lost.

**Please call us at 734.354.9591 with any concerns.**