



*Everything you need from tents to teaspoons*

### **Popcorn Machine**

We are pleased to provide to you quality equipment.

#### **Instructions:**

1. Turn all switches to "ON" position.
2. For the first batch ONLY let kettle heat for 3 minutes before adding oil and popcorn.
3. Add 1 oil pouch and 1 popcorn/salt pouch to kettle.
4. Doors must remain open while popping corn.
5. Dump kettle when popping is 99% completed.
6. Turn kettle heat switch and motor switch off when not popping. Doors can be kept closed after popping is completed.

#### **Cleaning:**

Remove all popcorn before returning. Do not immerse kettle in water. When kettle is cooled wipe outside of it. Wipe bottom of machine to remove loose kernels. Wipe glass with soft cloth. Do not use products containing ammonia to clean glass or plastic. This will damage equipment.

#### **Additional Information:**

- Popcorn bags (pack of 20) - \$2.00
- Salt/Popcorn/Oil (8-10 servings) - \$2.50

You will be charged a replacement fee for items returned dirty, broken, damaged or lost.

**Please call us at 734.354.9591 with any concerns.**